



# ExBin-P Pressure switches from 25 Pa ... 5.000 Pa

Electrical, explosion proof binary pressure or differential pressure switches  
24 VAC/DC supply voltage, output potential free switching contact  
PTB-certified in acc. with ATEX directive 94/9/EC for zone 1, 2, 21, 22

ExBin - P -...  
ExBin - P -... - 2  
ExBin - ... - CT  
ExBin - ... - OCT

Subject to change!

**Compact. Easy installation. Universal. Cost effective. Safe.**


Type	Sensor	Supply	Range	Min. setting	Max. pressure	Output switch	Max. ratings	Wiring diagram
ExBin - P-500	Pressure	24 VAC/DC	0... 500 Pa	25 Pa	5.000 Pa	pot. free contact	250 VAC, 0,1 A / 30 V, 0,5 A	SB 1.0
ExBin - P-5000	Pressure	24 VAC/DC	0...5.000 Pa	250 Pa	50.000 Pa	pot. free contact	250 VAC, 0,1 A / 30 V, 0,5 A	SB 1.0
ExBin - P-... - 2	as above with second switching output					2 × pot. free contacts	250 VAC, 0,1 A / 30 V, 0,5 A	SB 1.0
ExBin - ... - CT	as above with aluminium housing and Amercoat painting (sensor connection and cable glands nickel-plated, screws in stainless steel)							
ExBin - ... - OCT	as above offshore version seawater-resistant, with aluminium housing and Amercoat painting (stainless steel tubes for clamping ring connection, cable glands M20 × 1,5 mm nickel-plated, screws in stainless steel)							

## Application

Pressure or Δ pressure switch

ExBin-P-...CT (Amercoat version)

ExBin-P-...OCT (Offshore version)



## Description

The ExBin-P... pressure switch generation from 25...5.000 Pa (acc. to type) is a revolution for differential pressure switches in HVAC systems, in chemical, pharmaceutical, industrial and Offshore-/Onshore plants, for use in hazardous areas zone 1, 2 (gas) and zone 21, 22 (dust). Highest protection class (ATEX) and IP66 protection, small dimensions, universal functions and technical data guarantee safe operation even under difficult environmental conditions.

The switching points are scalable within the maximum ranges. The integrated display is for actual value indication which can be switched off. All sensors are programmable on site without any additional tools. ExBin-P-...-2 sensors are additionally equipped with a secondary switching output, which can be parameterized independently.

ExBin-P-...-OCT is equipped with stainless steel 316L tubing Ø 6 mm.

## Highlights

- ▶ For all type of gas, mixtures, vapours and dust for use in zone 1, 2, 21 and 22
- ▶ No additionally Ex-i module required
- ▶ No intrinsically safe wiring/installation between panel and sensor required
- ▶ No intrinsically safe wiring/installation and no space in the panel required
- ▶ Integrated Ex-e junction box
- ▶ Power supply 24 VAC/DC
- ▶ Output potential free switching contact
- ▶ Display with backlight, can be switched off
- ▶ Adjustable switching characteristics
- ▶ Adjustable hysteresis
- ▶ Adjustable starting bypass time
- ▶ Compact design and small dimensions (L × B × H = 180 × 107 × 66 mm)
- ▶ Robust aluminium housing in protection class IP66
- ▶ Down to -20 °C ambient temperature applicable
- ▶ Password locking
- ▶ Optional second switching output
- ▶ CT versions have an excellent resistance to chemicals and seawater
- ▶ OCT as CT version plus pressure tube connection for clamping ring Ø 6 mm



Technical data	ExBin - P-500	ExBin - P-5000
Power supply	24 VAC/DC ± 20% (19,2...28,8 VAC/DC) 50...60 Hz	
Current, power consumption	150 mA, ~ 4 W, internal fuse 500 mA, without bracket, not removable	
Galvanic isolation	Supply – output 1,5 kV	
Electrical connection	Terminals 0,14...2,5 mm <sup>2</sup> at integrated Ex-e junction box, stripping length 9 mm, torque 0,4...0,5 Nm	
Cable entry	2 × M16 × 1,5 Ex-e approved, cable diameter ~ Ø 5...10 mm (...CT in nickel-plated)	
Cable entry ...OCT	2 × M20 × 1,5 Ex-e approved, cable diameter ~ Ø 6...13 mm (...OCT in nickel-plated)	
Display	LCD with backlight, display for configuration, user guidance, parameter and actual value indication via LEDs	
Control elements	3 buttons for configuration	
Housing protection	IP66 in acc. to IEC 60529	
Housing material	Aluminium casting, coated (...-CT/...-OCT = version in Amercoat marine painting, seawater-resistant)	
Dimensions / weight	L × W × H = 180 × 107 × 66 mm / ~ 950 g	
Ambient temperature/humidity	-20...+50 °C / 0...95% rH, non condensed	
Storage temperature	-40...+70 °C	
Measuring range	0...500 Pa	0...5.000 Pa
Range scalable on site	Minimum measuring range is 5 % of full range, e.g. ExBin-P-500 = 25 Pa	
Maintenance	Maintenance free, nevertheless maintenance must be complied with regional standards, rules and regulations	
Sensor circuit	Internal „IS“ circuit	
Sensor	Piezo-pressure-transmitter	
Pressure connection	P+ / P- sleeves Ø 4...6 mm, OCT-version has a Ø 6 mm stainless steel tube connection for clamp ring fittings.	
Response time of sensor	T90 / 5 sec.	
Accuracy of pressure	< ± 1 % typically, max. ± 5 % of end value ± 1 Pa	
Setting range hysteresis	0,5 Pa...50,0 Pa (factory setting 10,0 Pa)	5,0 Pa...500,0 Pa (factory setting 100,0 Pa)
Start delay	5 sec.	
Starting bypass time	3...240 sec. (via menu adjustable; preset 120 sec.)	
Setting zero point	Via menu, mechanical short circuit of P+ / P- for the moment of zero point setting	
Output switch	Potential free switching contact	
	<b>Ratings load max.</b> 0,5 A at 30 VAC/DC / 0,1 A at 250 VAC / 0,1 A at 220 VDC	
	<b>Ratings load min.</b> 10 mW / 0,1 V / 1 mA	
Mechanical life	10 × 10 <sup>6</sup>	
Electrical life (rated load)	100 × 10 <sup>3</sup>	
Wiring diagram (SB)	SB 1.0	
Installation sensor / tubing	In Ex-area zone 1, 2, 21, 22	

Explosion proof		
PTB-tested	PTB 09 ATEX 2011	94/9/EC (ATEX)
Approval for gas	II2(1)G Ex e mb[ia] IIC T6	for zone 1, 2
Approval for dust	II2(1)D Ex tD A21 [iaD] IP66 T80 °C	for zone 21, 22
CE-Mark	CE No. 0158	
EMC directive	2004/108/EC	
Low voltage directive	2006/95/EC	
Protection type	IP66 in acc. to EN 60529	
Potential compensation	external PA-terminal, 4 mm <sup>2</sup>	
Protection Class	Class I (grounded), overload voltage category II acc. EN 61010-1	

Accessories	
<b>MKR</b>	Mounting bracket for round ducts up to Ø 600 mm
<b>Kit 2</b>	Consists of 2 m flexible pressure tube Ø 6 mm, 2 connection nipples




### Electrical connection


ExBin-P... switches are equipped with a 24 VAC/DC power supply. The supply has to be connected at terminal 1 (-/-) and 2 (+/+). The electrical wiring must be realized via integrated Ex-e junction box in acc. to ATEX. Type of protection for the terminals is „Ex-e“. If supply voltage 24 VAC/DC different from the relay voltage must be used different or double isolated cables. The starting bypass delay can be activated by a short circuit of terminal 2 and terminal 3 (AUB). An active bypass delay is indicated with green blinking LEDs.

**Attention:** Do not open covers when circuits alive!

### Wiring diagram ExBin-P... / ExBin-P...-2

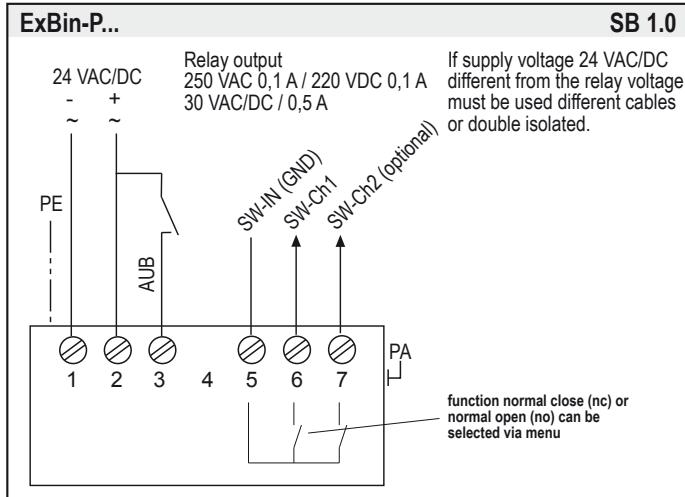

### Display and buttons

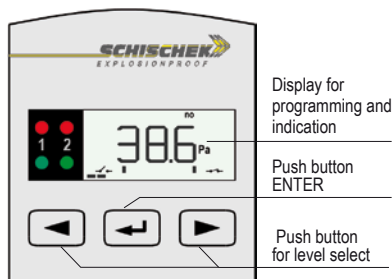


### Change operation-/parametrisation mode

To change from operation to parametrisation mode push the enter button for minimum 3 seconds. Back over the menu save.

### Indication of data logging

A blinking unit in the display shows that data is received and the device is working.

### Dimensions/drillings

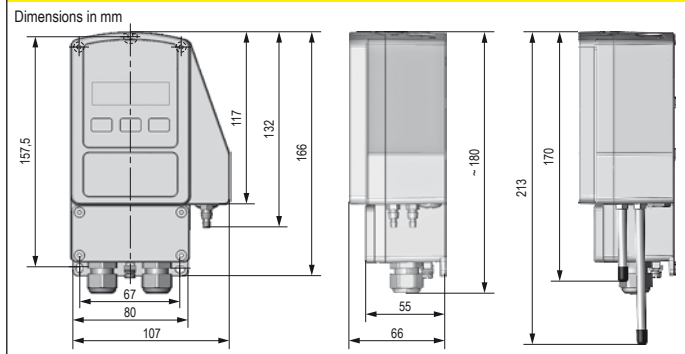

### Password input

The default / delivery setup is **0000**. In this configuration the password input is not activated. To activate a password change the 4 digits into your chosen numbers (e.g. 1234) and press Enter.

**Please keep your password in mind for next parameter change!**

Due to a new parameter setup the password is requested.

### Installation

Ex-area zone 1, 2, 21, 22

Safe area

Supply  
24 VAC/DC

Relay output  
250 VAC/0,1 A 30 V/0,5 A

- Maintenance must comply with regional standards, rules and regulations
- Do not open covers when circuits are alive
- For electrical connection use the integrated junction box Ex-e
- The cable must be installed in a fixed position and protected against mechanical and thermal damage
- Connect protection earth
- Avoid thermal transfer from sensor probe to transducer (ensure max. ambient temperature)
- Ambient temperature -20...+50 °C
- Close all covers, entries with min. IP66
- All transducers are maintenance free
- For outdoor installation a protective housing against rain, snow and sun should be applied
- Only wet cleaning

### Important information for installation and operation

#### A. Installation, commissioning, maintenance

The cable has to be drawn through the cable gland. After electrical connection the cable gland must be fixed tighten. IP66 must be fulfilled. In acc. with operation ExBin switches are maintenance free. Nevertheless maintenance must comply with regional standards, rules and regulations. The sensors must not be opened by the customer. For outdoor installation a protective housing against rain, snow and sun should be applied. For electrical connection use the internal approved Ex-e junction box.

**Attention:** Note the explosion proof rules before opening the internal junction box.

Cut off the power supply.

#### B. Supply and Contact

Wires from safety extra low voltage must be separated from others. Only at 24 VAC/DC supply and signal wires in one cable is permitted. All others use separate or double isolated cables. Install overload protection fuse < 10 A.

#### C. Pressure sensors

After mounting and installation, a zero point compensation must be done, because the offset value depends on the installation position. Have a look to parametrisation.

#### D. Long cabling

For using long signal wires, shielded cables are recommended. The shield must be connected to the ExBin-P switch inside the terminal box.

#### E. Separate ground wires

Use for supply and signal wires a separate ground.

### Zero point compensation for pressure transmitter

For a ExBin-P... pressure switch installation a zero point compensation should be performed to adjust value deviations of the module's installation position. Therefore the pressure nipples P+ / P- must be connected with a short circuit tube and the zero point compensation accomplished by following the menu.

Before starting the compensation the device should be connected to the power supply for minimum of 15 minutes to reach the working temperature!


**Parametrisation and commissioning of ExBin-P transducers**
**Preparation of parametrisation/operation**

Operation ↔ Parametrisation, push for 3 sec.

If password (PW) protection is active: put PW in, push


**Change operation-/parametrisation mode**

To change from operation to parametrisation mode push „Enter“ button for minimum 3 seconds. Back over the menu save.

Menu	Function	Enter	Indication	Select	Enter	Next indication	Next selection	Enter	Next menu
Menu 1	Preset select application		Menu 1 PRO						
Menu 2	unit sensor 1 select physical unit		Menu 2 Pa			Pa, mBar, lnH <sub>2</sub> O			
Menu 3	set 1 select switching point 1		Menu 3 2000 Pa			adjust set 1			
Menu 4	set 2* select switching point 2		Menu 4 4000 Pa			adjust set 2			
Menu 5	hysteresis** select physical unit		Menu 5 100 Pa			adjust hysteresis			
Menu 6	mode** select switching characteristic		Menu 6 UP			norm. open (no), norm. closed (nc)	Menu 6 nc		
Menu 7	no function – menu skip								
Menu 8	no function – menu skip								
Menu 9	no function – menu skip								
Menu 10	no function – menu skip								
Menu 11	no function – menu skip								
Menu 12	time select time for starting bypass (AUB)		Menu 12 100			adjust bypass time			
Menu 13	lamp select backlight		Menu 13 ON			on, off			
Menu 14	zero point compensation		Menu 14 FUN						
Menu 15	security select password		Menu 15 0000			enter password			
Menu 16	save select save data		Menu 16 YES			no, yes, return, default setting			

\* available for 2-stage version only (ExBin-P...-2)

\*\* useable in professional mode only (see Menu 1 – professional mode)

**Using the menu 1 „Preset“**


To beware complexity during the parametrisation process, the ExBin-P has several predefined setups which distinguish between its intended application. You'll find a detailed description of all possible presets in the following section.

**Fan speed monitoring**


The preset „FAN“ is designed for use in fan speed monitoring applications.



Menu1: Select "FAN" and press the enter button.

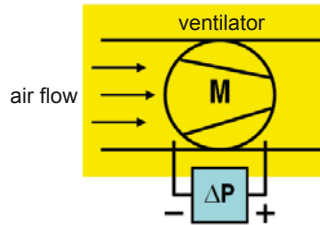

If the „FAN“-preset has been selected in menu 1, all settings were made as the following ones:

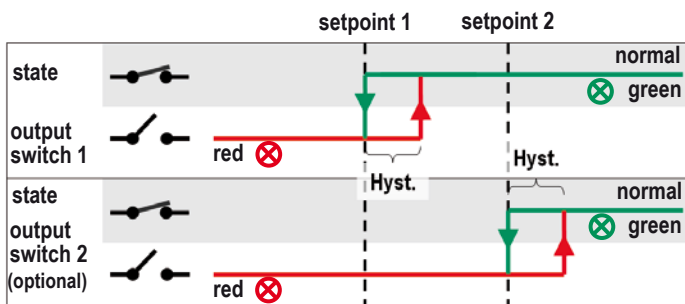


The user has not to set the menu 5 „hysteresis“ and menu 6 „mode“, this will be done via software. These menus will be skipped during the further parametrisation process.

**Filter monitoring**


The preset „FILT“ is designed for use in filter monitoring applications.



Menu1: Select „FILT“ and press the enter button.

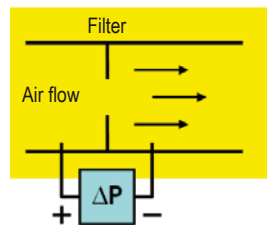

If the „FILT“-preset has been selected in menu 1, all settings were made as the following ones:

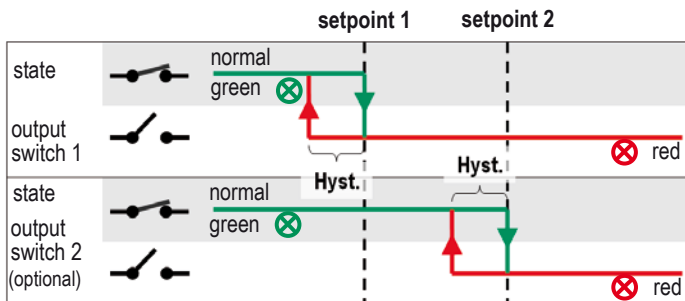

The user has not to set the menu 5 „hysteresis“ and menu 6 „mode“, this will be done via software. These menus will be skipped during the further parametrisation process.

**Professional mode**

For all other applications the professional mode is designed for.



Menu1: Select „PRO“ and press the enter button.

If the „PRO“-preset has been selected in menu 1, the parametrisation procedure will be added by two further menus: menu 5 „hysteresis“ and menu 6 „mode“. For this preset the user has to select the values for the hysteresis and for the mode.

**Using the menu 6 „mode“**

First of all the user has to define the device normal range. For example:

- The device should indicate (green LED) if the pressure is under the setpoints, mode „down-range“ has to be selected. With other words: the measure value is normally under the setpoints.
- The device should indicate (green LED) if the pressure is over the setpoints, mode „up-range“ has to be selected. (The measure value is normally over the setpoints.)
- The device should indicate (green LED) if the pressure is between the setpoints, mode „mid-range“ has to be selected. (The measure value is normally between the setpoints). This mode is only for 2-stage devices available (ExBin-P...-2).


In the second step the switching characteristic of the output relay has to be selected:

- „normally closed“ (nc): if the measure value is in the normal range (see above), the corresponding relays were closed.
- „normally open“ (no): if the measure value is in the normal range (see above), the corresponding relays were open.

You'll find a detailed description of all possible settings in the following section.


**Switching characteristic „up-range“ – „normally closed“**

„Up-range“: the normal range is above setpoint 1 and setpoint 2

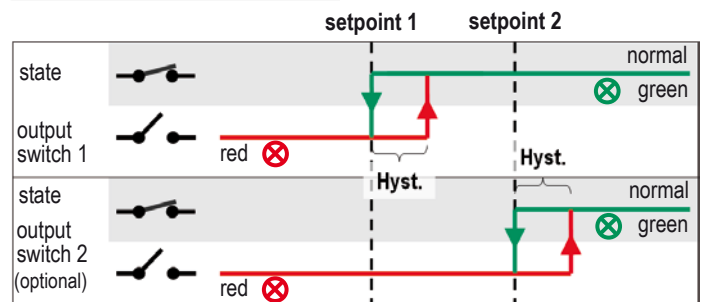


**Switching characteristic „up-range“ – „normally open“**

„Up-range“: the normal range is above setpoint 1 and setpoint 2

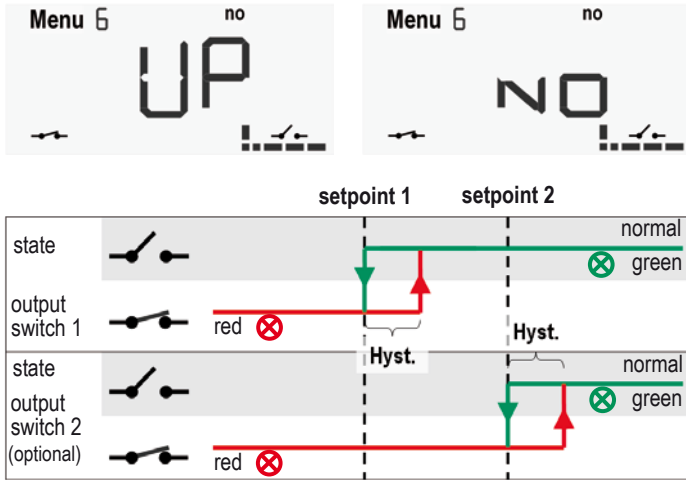


**Switching characteristic „down-range“ – „normally closed“**

„Mid-range“: the normal range is under setpoint 1 and setpoint 2

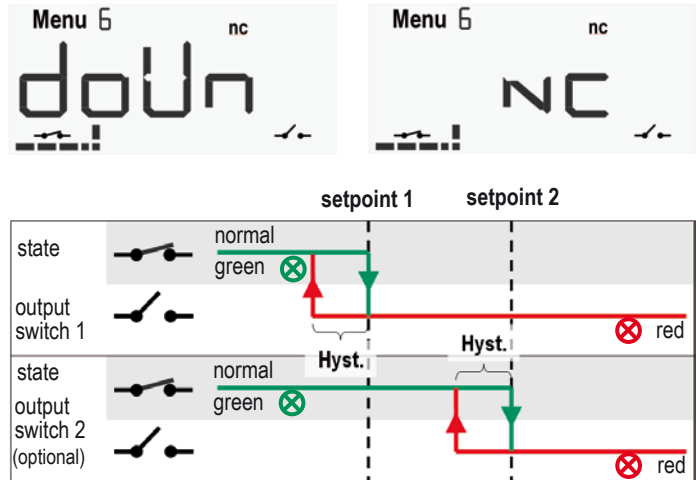


**Switching characteristic „mid-range“ – „normally closed“**

„Mid-range“: the normal range is between setpoint 1 and setpoint 2 (for 2-stage devices only)

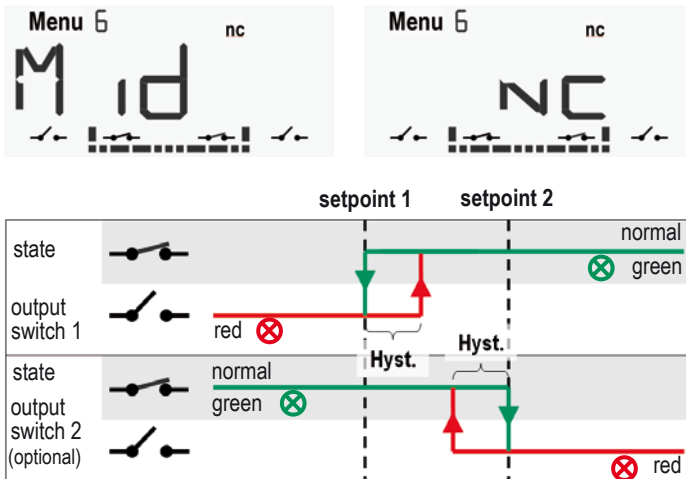

**Switching characteristic „down-range“ – „normally open“**

„Mid-range“: the normal range is under setpoint 1 and setpoint 2

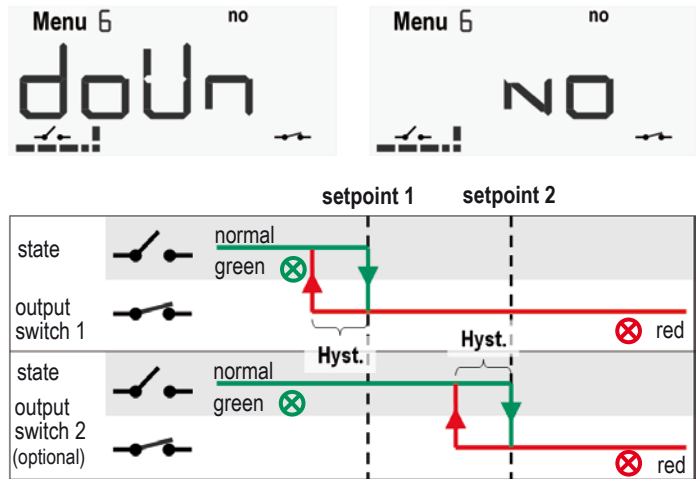

**Switching characteristic „mid-range“ – „normally open“**

„Mid-range“: the normal range is between setpoint 1 and setpoint 2 (for 2-stage devices only)

